


# LUCID

## LUCID AIR SEDAN

2021 - Present

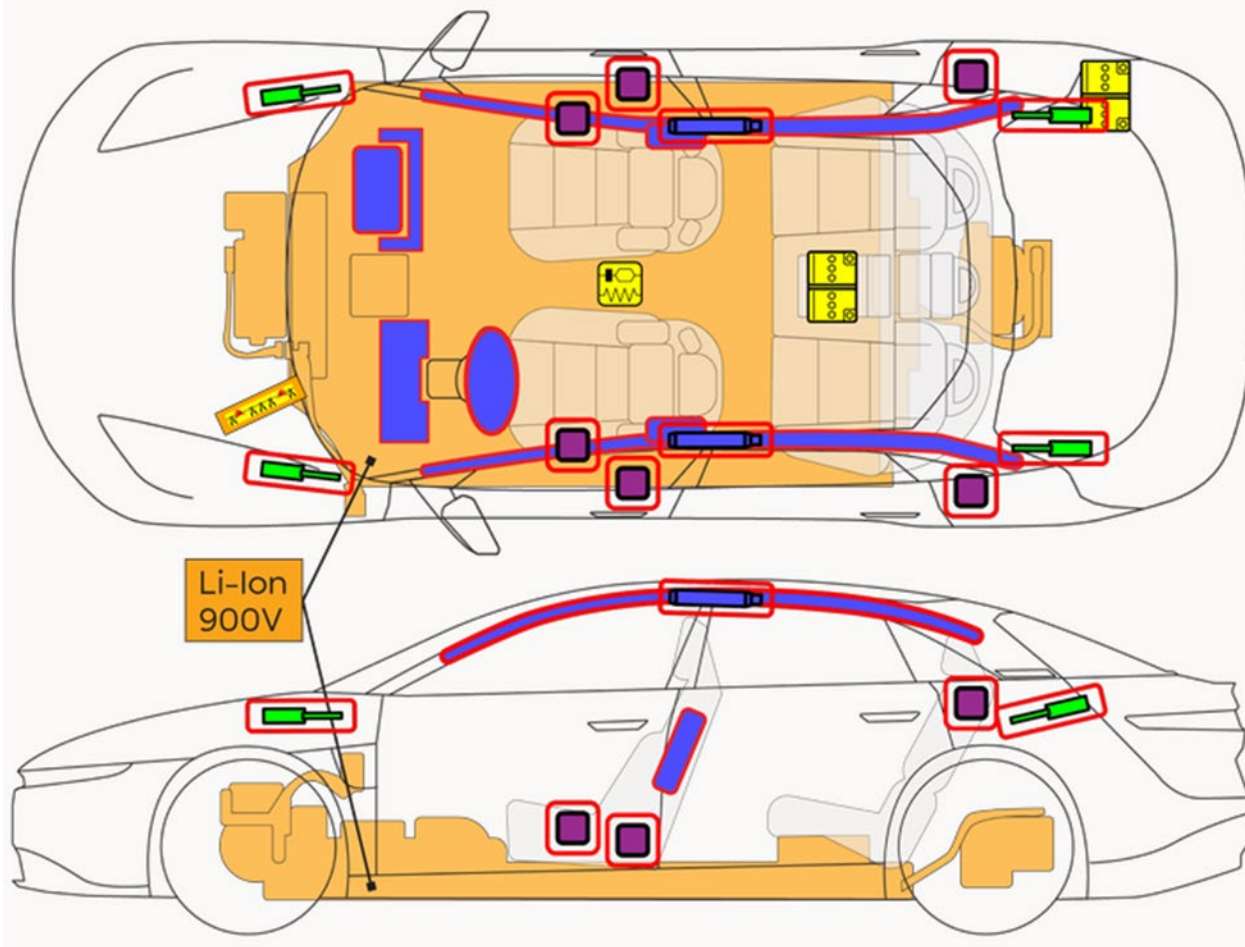

|  |                                      |  |                                      |  |                         |  |                                        |  |                                     |
|--|--------------------------------------|--|--------------------------------------|--|-------------------------|--|----------------------------------------|--|-------------------------------------|
|  | Airbag                               |  | Stored gas inflator                  |  | Seatbelt pretensioner   |  | SRS control unit                       |  | Pedestrian protection active system |
|  | Automatic rollover protection system |  | Gas strut / pre-loaded spring        |  | High strength zone      |  | Zone requiring special attention       |  | High voltage component              |
|  | Battery low voltage                  |  | Ultra capacitor, low voltage         |  | Fuel tank               |  | Gas tank                               |  | Safety valve                        |
|  | High Voltage battery pack            |  | High voltage power cable / component |  | High voltage disconnect |  | Fuse box disabling high voltage system |  | Ultra capacitor, high voltage       |
|  | Cable cut                            |  |                                      |  |                         |  |                                        |  |                                     |

# LUCID

Document  
50E-ANA21

Version  
02


Date  
7/20/2022

Page  
1 of 4

## 1. Identification / recognition





**WARNING** Lack of engine sounds does not mean the vehicle is off. Silent movement or instant restart capabilities exist until vehicle is fully shut down. Wear appropriate PPE.

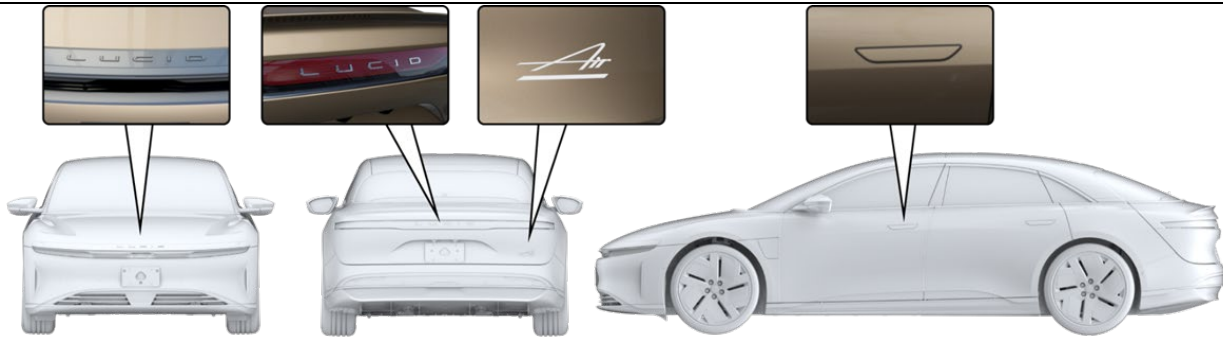

## 2. Immobilization / stabilization / lifting

1.

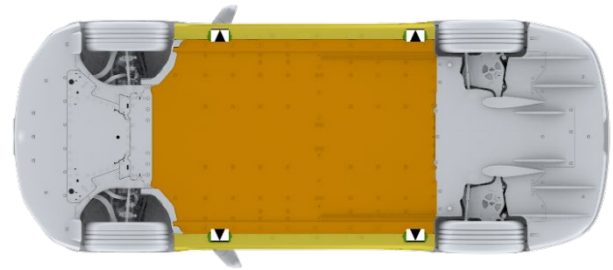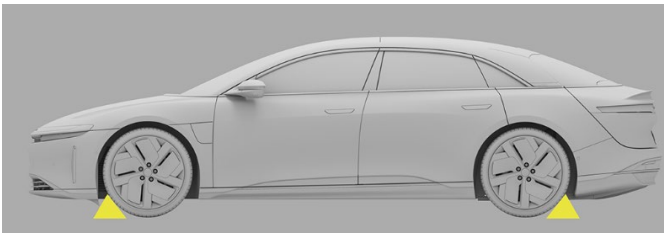

Approved lifting points




Safe stabilization points for a Lucid Air on it's side.



High Voltage Battery pack- Do not use for lifting or stabilization

2.

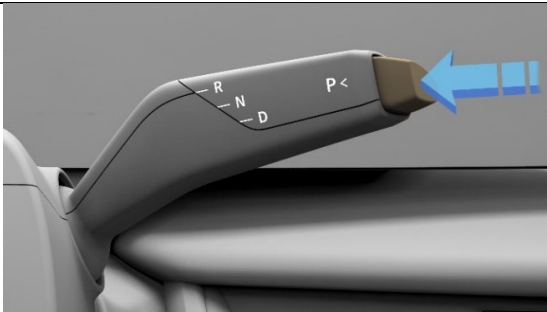


## 3. Disable direct hazards / safety regulations


1.



2.

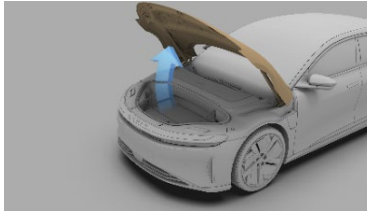


3.

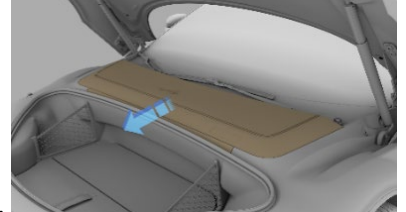

4.



If vehicle is charging, disconnect charger.

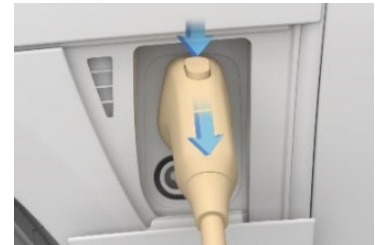




#### 4. Access to the occupants

All windows consist of laminated safety glass.  
**Note:** Rapid extrication activities may require the use of high-pressure punch and glass cutters.



**WARNING** Electrical and mechanical releases may be compromised after a collision.

- If exterior door handles are inoperative, break glass as needed to access interior handles.
- Slide handle back once to unlock the door, then cycle again to open.

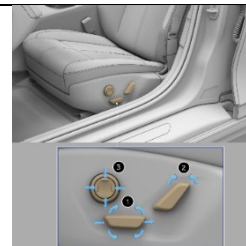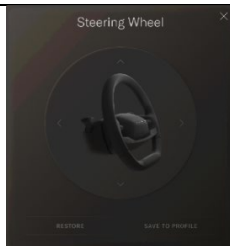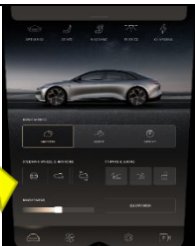

#### 5. Stored energy / liquids / gases / solids



**Warning** Never cut, breach, or touch high voltage components or cabling. Doing so could result in serious injury or death.



|                                    |  |                                        |
|------------------------------------|--|----------------------------------------|
|                                    |  | 12 Volts<br>Sealed<br>AGM              |
|                                    |  | Li-Ion<br>900V                         |
|                                    |  | R-1234yf<br>725 grams                  |
| -20° Washer Fluid                  |  | Methanol<br>30-40wt%<br>≤1Gal./3.8L    |
| High-Voltage<br>systems<br>Coolant |  | Dex-Cool<br>Glycol based<br>≤5Gal./19L |

#### 6. In case of fire



Only use water to extinguish the battery pack.  
 Submerging the vehicle is not recommended.

For real time support for firefighting/rescue operations  
 involving the Lucid Air,  
 Call 1-855-ESA-SAFE



Potential for reignition exists. Monitor with appropriate equipment.



#### 7. In case of submersion

**LUCID**

Document  
50E-ANA21

Version  
02


Date  
7/20/2022

Page  
3 of 4

Wear appropriate PPE when handling any submerged vehicle. Submerged vehicles should be staged in a safe area upon removal and monitored for thermal and physical indications of a thermal event for 45 minutes prior to transport. After the vehicle removed from water continue with disabling process. Vehicle should then be drained of water.

## 8. Towing / transportation / storage

**Must be towed via flatbed only with wheels off the ground, Dollies are not permitted.**

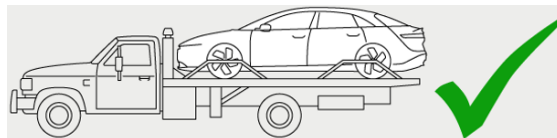

**WARNING** It is possible for the High Voltage battery to ignite or re-ignite after an incident. Store the vehicle a minimum of 50 feet or 15 meters from other vehicles, structures, and flammable materials for a minimum of 24 hours and monitor temperatures with Thermal imaging Camera.



**WARNING** The vehicle recovery eye cannot be used if the pull angle is greater than 25 degrees from eye center horizontally or greater than 5 degrees from eye center vertically. Exceeding these limits may result in serious injury or death.

## 9. Important additional information

For real time support for firefighting/rescue operations involving the Lucid Air, call 1-855-ESA-SAFE and a rescue specialist will be available 24/7 to answer any questions

## 10. Explanation of pictograms used

|  |                                        |  |                           |  |                          |
|--|----------------------------------------|--|---------------------------|--|--------------------------|
|  | Class B High Voltage propulsion system |  | Explosive                 |  | Cable cut                |
|  | High Voltage Battery pack              |  | Flammable                 |  | Lifting point            |
|  | General warning                        |  | Corrosives                |  | Gas Detector             |
|  | Warning, High Voltage electricity      |  | Hazardous to human health |  | Steering column movement |
|  | Infrared Thermal Camera                |  | Acute toxicity            |  | Lateral seat movement    |
|  | Extinguish with water                  |  | Environmental hazard      |  | Vertical seat movement   |