




Kia EV9 Electric SUV, 5doors From 2023

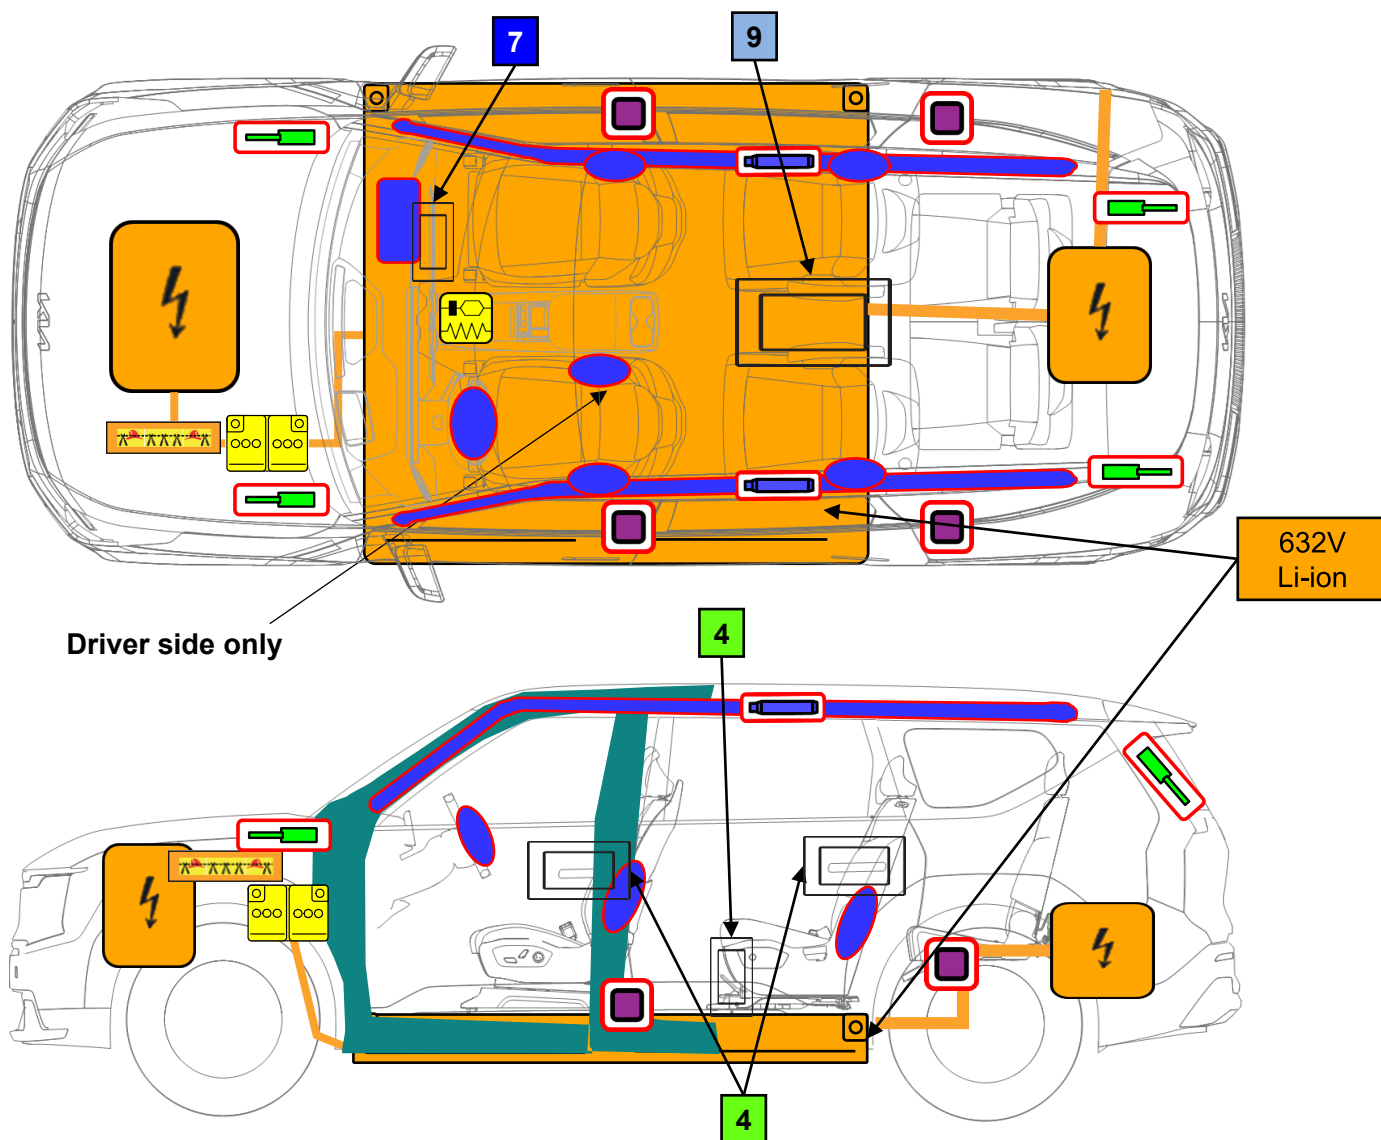

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Gas strut / Preloaded spring		High strength zone		Battery, low-voltage		High voltage component
	Battery pack, high-voltage		High voltage power cable		Cable Cut		Zone requiring special attention

1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.



Brand Logo Name



Model name



Charging door

2. Immobilization / stabilization / lifting

Immobilization:

1



1. Chock the wheels and pull the switch to set the parking brake.


2



2. For automatic transmission vehicles, shift into park (P) gear.



Lifting points under the vehicle:

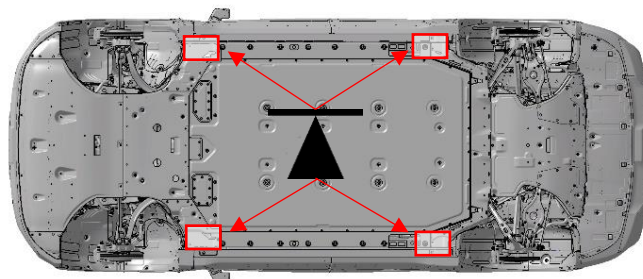

JACK/SUPPORT POSITION

3. Disable direct hazards / safety regulations



IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. FOR ALL OTHER CASES USE THE DISABLING METHODS BELOW



Main method HV-battery:



Access:

1. Push the release button twice or if not work pull the emergency lever twice after removing the emergency open cover



2. Raise the hood & Open the battery cover



3. Cut the cable marked at the fuse box.

Battery, low-voltage:



Access:



1. Push the release button twice



2. Raise the hood



3. Open the battery service cover

Disabling:



Turn the ignition switch off



Access to battery shown above



Disconnect the negative(-) terminal



Disconnect the positive(+) terminal

4. Access to the occupants

Steering column adjustment:



Seat adjustment:

MANUAL
POWER




SWIVELING:


Seats of the 2nd row can be 180° rotated (6 seater variant)

Glass:

1. Laminated
2. Tempered, Laminated(OPT)
3. Tempered, Laminated(OPT)
4. Tempered
5. Tempered

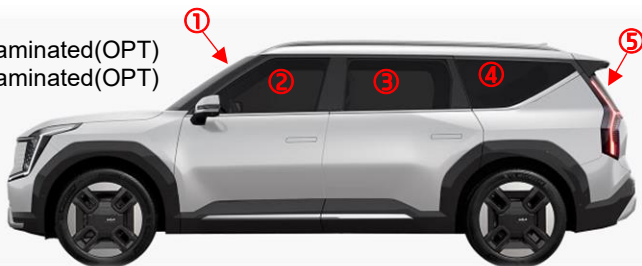

Vehicle body → Hardened Steel

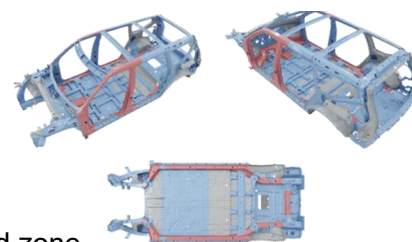

Mild zone
Advanced high strength zone
High strength zone

Door handle:



When the door outer handle doesn't pop-up, push the front side inwards.

Liftgate:




Remove the cover at the bottom of the liftgate, then slide the latch in the direction of the arrow to unlock the liftgate.

5. Stored energy / liquids / gases / solids

		12V	
		632V	
		R-134a	1375g
		R-1234yf	1300g



 WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL INFRARED CAMERA.




6. In case of fire




USE LARGE AMOUNT OF WATER



 BATTERY RE-IGNITION!



 GAS STRUT!
RISK OF MISSILE EFFECT OF
HOOD AND LIFTGATE.



7. In case of submersion




DO NOT TOUCH ANY OF HIGH-VOLTAGE COMPONENTS OR CABLES INCLUDING THE HIGH VOLTAGE CUT-OFF SWITCH, AS DOING SO POSES AN ELECTROCUTION HAZARD. WORK ON THE VEHICLE ONLY AFTER THE VEHICLE HAS BEEN PULLED OUT OF THE WATER



Emergency hammer located in the glove box.


8. Towing / transportation / storage

OK

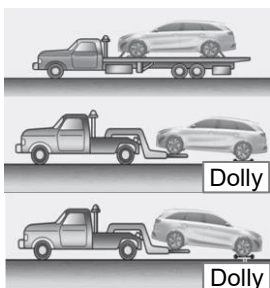

Notice: The use of wheel dollies or flatbed is recommended. Use a wheel lift or flatbed equipment.


Not OK

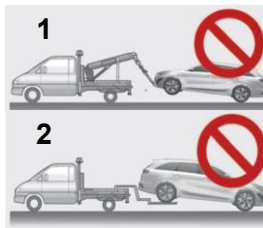

Notice: Do not tow with sling-type equipment. Do not tow the vehicle with the driven wheels on the ground as this may cause damage to the vehicle.

Location front hook

Location rear hook

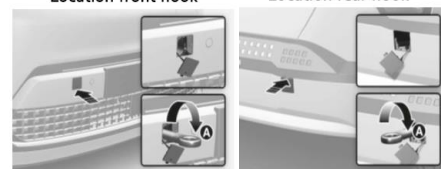

- Towing hock located in the tool case in the liftgate

The hook must be used only temporary towing.
Store at safe distance from other vehicles

9. Important additional information

The EV9 has an 7 seater variant:
Additional seat in the middle of the 2nd row.

10. Explanation of pictograms used

	Electric vehicle		Warning, Electricity		Hood
	General warning sign		Air-conditioning component		Trunk
	Corrosives		Hazardous to the human health		Flammable
	Explosive		Acute toxicity		Environmental hazard
	Use thermal Infrared camera		Use water to extinguish the fire		