



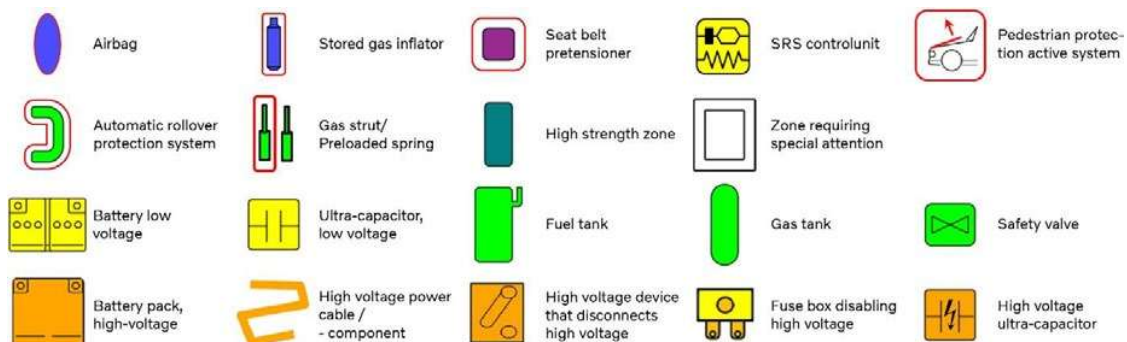

**Polestar 2**  
**Type: 5dr hatchback**  
**(2020 - )**

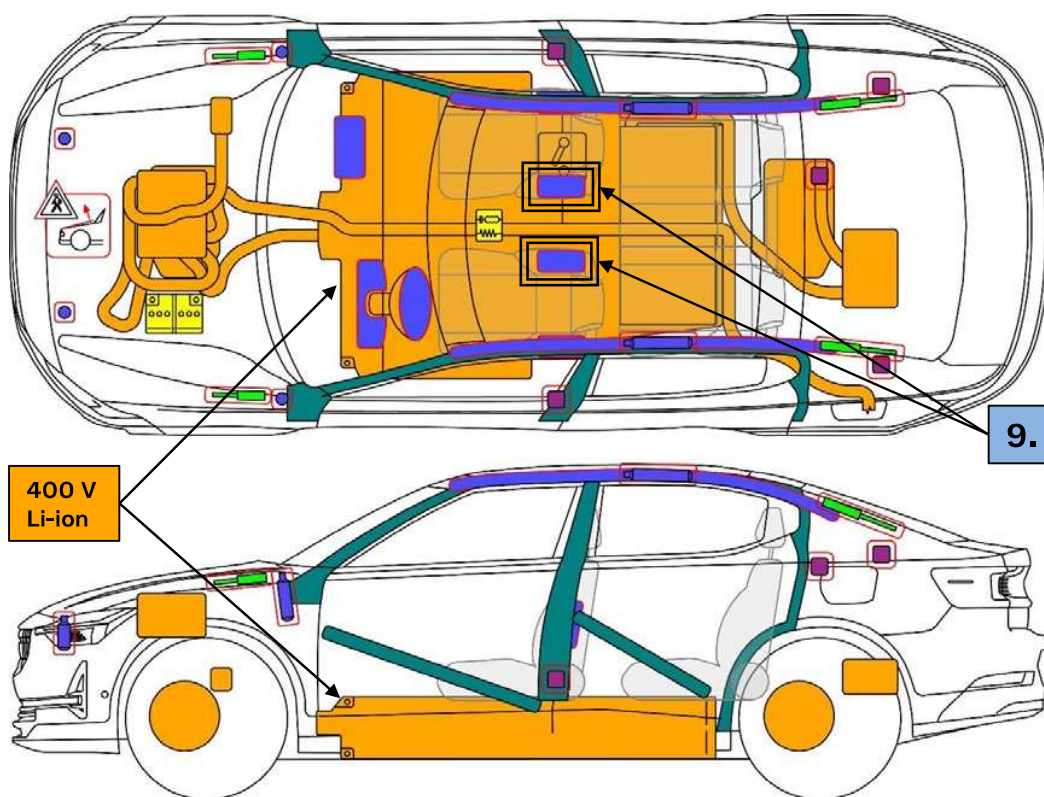

Document N°

RDS\_Polestar\_2-ENG

Version N°

01

Version date

05/2021

Page N°

1 / 4

## Polestar 2: 5dr hatchback (2020 - ) – Additional Pages

### 1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.

Brand name front



Brand name rear




Charge port



### 2. Immobilization / stabilization / lifting

Immobilize vehicle:

1. Block wheels and set parking brake;
2. Push the P (park) button to select the P (park) position.

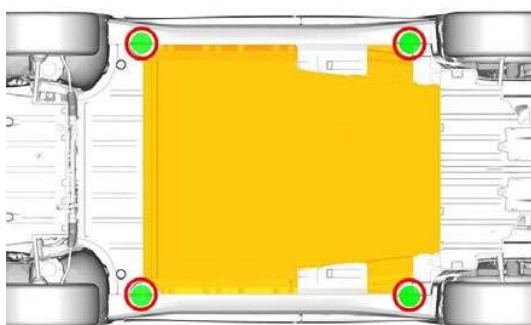


Lifting points:

- Appropriate lifting points;
- High voltage battery;

### 3. Disable direct hazards / safety regulations

The propulsion system is disabled when the 'Safety mode See Manual' indicator in the instrument cluster is illuminated.


Deactivation of propulsion system, if 'Safety mode See Manual' indicator is not illuminated:

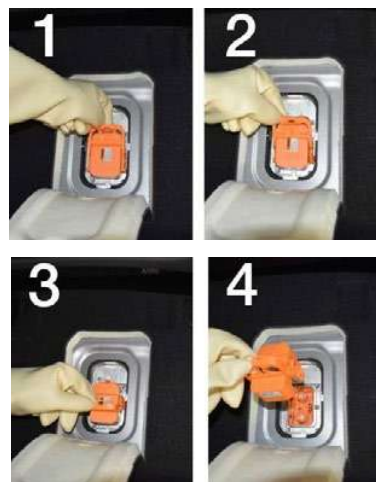

|  | Document N°        | Version N° | Version date | Page N° |
|--|--------------------|------------|--------------|---------|
|  | RDS_Polestar_2-ENG | 01         | 05/2021      | 2 / 4   |

## Polestar 2: 5dr hatchback (2020 - ) – Additional Pages

### Disconnect 12 Volt battery

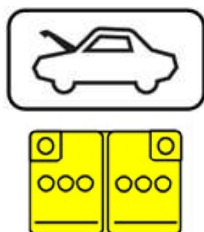

### Safety regulations:



Always assume the vehicle is powered, even if it is silent!  
Make sure that the vehicle is immobilized and the propulsion system is deactivated;  
Never touch, cut, or open any orange high voltage power cable or high voltage component;  
In case of a collision with airbag deployment and/or seat belt pretensioner activation, the propulsion system will be disabled. The restraint systems are still active.

## 4. Access to the occupants

### Seat adjustment



### Steering column adjustment



### Glass types:

- A. Laminated glass.
- B. Tempered glass.



## 5. Stored energy / liquids / gases / solids

|                                                                                     |                       |                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------------------------------------------------------------------------------|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | 400V                  |      |
|  | 12V                   |                                                                                                                                                                                                                                                                                                                                                   |
|  | R-1234yf<br>395-445 g |                                                                                          |



When conventional coolant leaks (check reservoir ?) from the high voltage (HV) battery cooling system, HV-battery can become unstable with risk of thermal runaway. An increasing HV-battery temperature might be an indicator of thermal runaway.

 


## 6. In case of fire

### Extinguish method for the high voltage (HV) battery:



**USE LARGE AMOUNTS OF PURE WATER DIRECTLY TO THE HV-BATTERY**



**POTENTIAL RISK OF BATTERY RE-IGNITION / DELAYED IGNITION!**

| Document N°        | Version N° | Version date | Page N° |
|--------------------|------------|--------------|---------|
| RDS_Polestar_2-ENG | 01         | 05/2021      | 3 / 4   |

## Polestar 2: 5dr hatchback (2020 - ) – Additional Pages

### 7. In case of submersion

- There is no increased risk of electric shock in water resulting from the high voltage system;
- If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3).

### 8. Towing / transportation / storage

Recovery hook storage



 
Location front hook



Location rear hook



**STORE VEHICLE IN AN OPEN-AIR PARKING AT SAFE DISTANCE  $\geq 5\text{M}$  FROM OTHER OBJECTS OR VEHICLES!**



**POTENTIAL RISK OF BATTERY RE-IGNITION / DELAYED IGNITION!**

Towing



### 9. Important additional information

Centre airbag



### 10. Explanation of pictograms used

|  |                                  |  |                                         |
|--|----------------------------------|--|-----------------------------------------|
|  | Smart key distance               |  | Electric vehicle                        |
|  | Warning high voltage             |  | Risk of flammability                    |
|  | Caution                          |  | Risk of damaging human health           |
|  | Warning low temperature          |  | Risk of acute toxicity                  |
|  | Air-conditioning component       |  | Risk of corrosive material / substances |
|  | Use water to extinguish the fire |  | Bonnet                                  |
|  | Use IR Camera (thermal imaging)  |  |                                         |

|  | Document N°        | Version N° | Version date | Page N° |
|--|--------------------|------------|--------------|---------|
|  | RDS_Polestar_2-ENG | 01         | 05/2021      | 4 / 4   |