


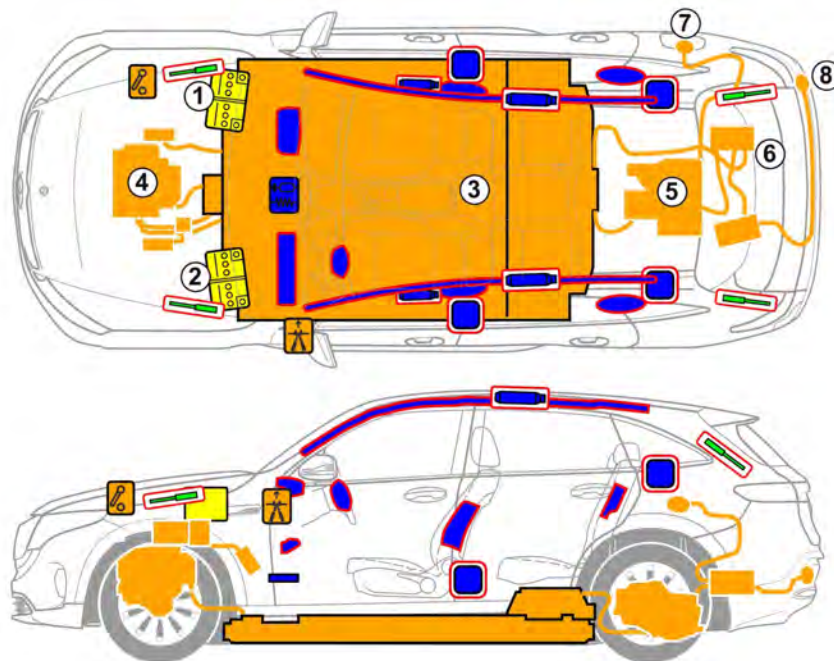

- | | | | |
|--------------------------------------|---------------------------------------|------------------------------|---|
| ① Main battery 12 V, Left-hand drive | ② Main battery 12 V, Right-hand drive | ③ High-voltage battery | ④ Front drive module |
| ⑤ Rear drive module | ⑥ On-Board charger | ⑦ High-voltage charge socket | ⑧ High-voltage charging socket (China & Japan only) |



Legend

- | | | | |
|--------------------------------|--|----------------------|-------------------------|
| Airbag | Gas generator | Seat belt tensioner | Gas-filled strut |
| Restraint systems control unit | 12 V Battery | High-voltage battery | High-voltage components |
| High-voltage disconnect device | Alternative high-voltage disconnect device | | |



High-voltage disconnect device

The high-voltage disconnect device is located on the right side of the engine compartment.

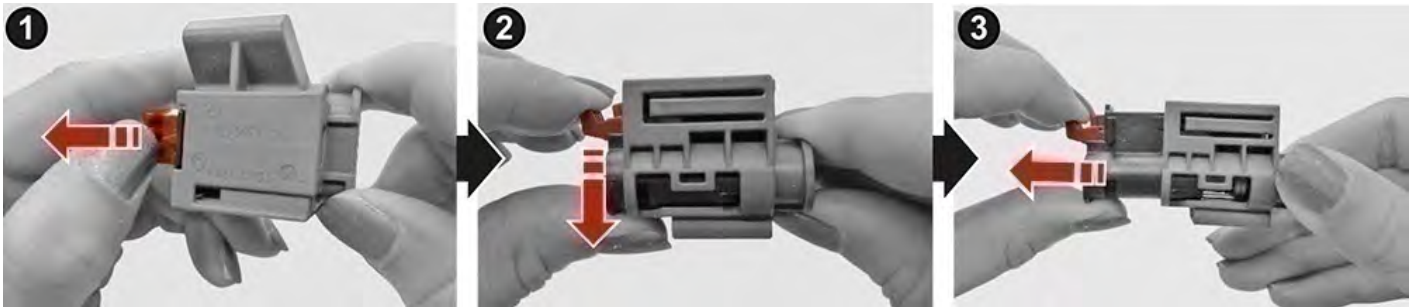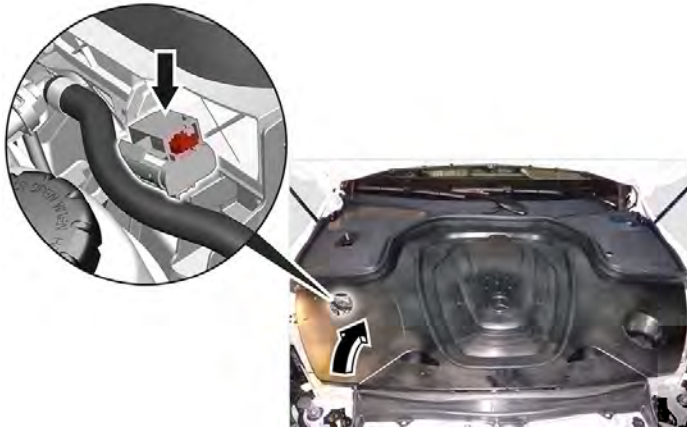

1. Operate release / 2. Push the release downwards / 3. Pull out switch

Alternative high-voltage disconnect device


The alternative high-voltage disconnect device is located behind the cover of the fusebox in the cockpit. It is marked with an information label.





Remove cover (1) of fuse box / Cut line at marked location (2)

Vehicle identification

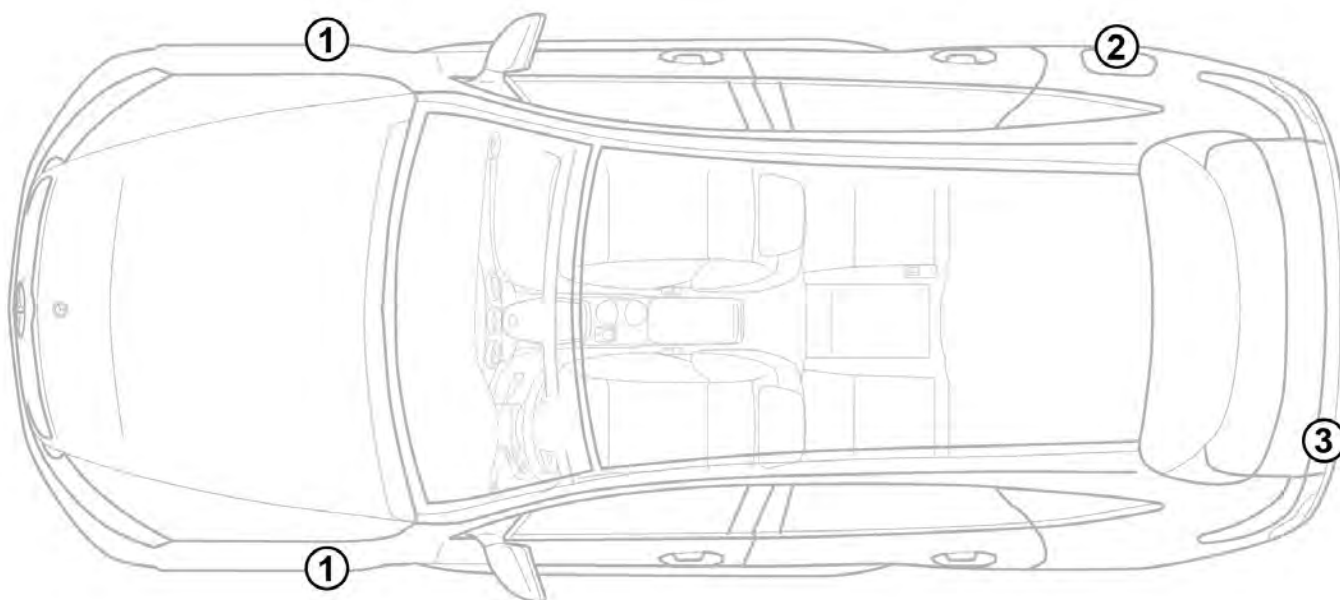

① Right fender / Left fender

② High-voltage charging socket

③ Left of trunk lid

