



Vehicle Identification/Recognition

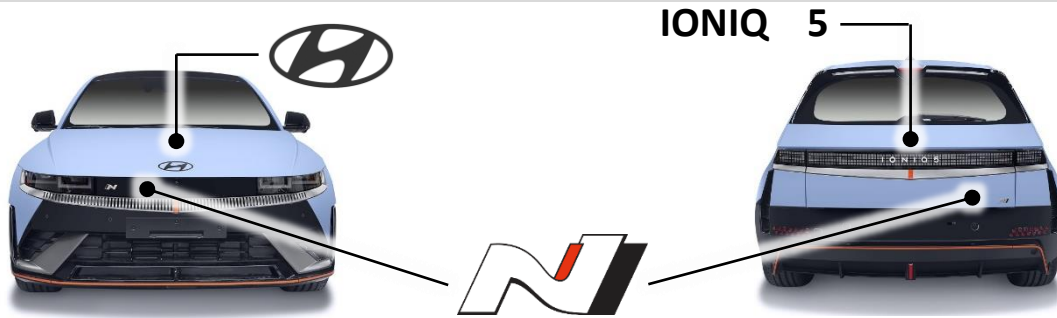


Accessing Vehicle

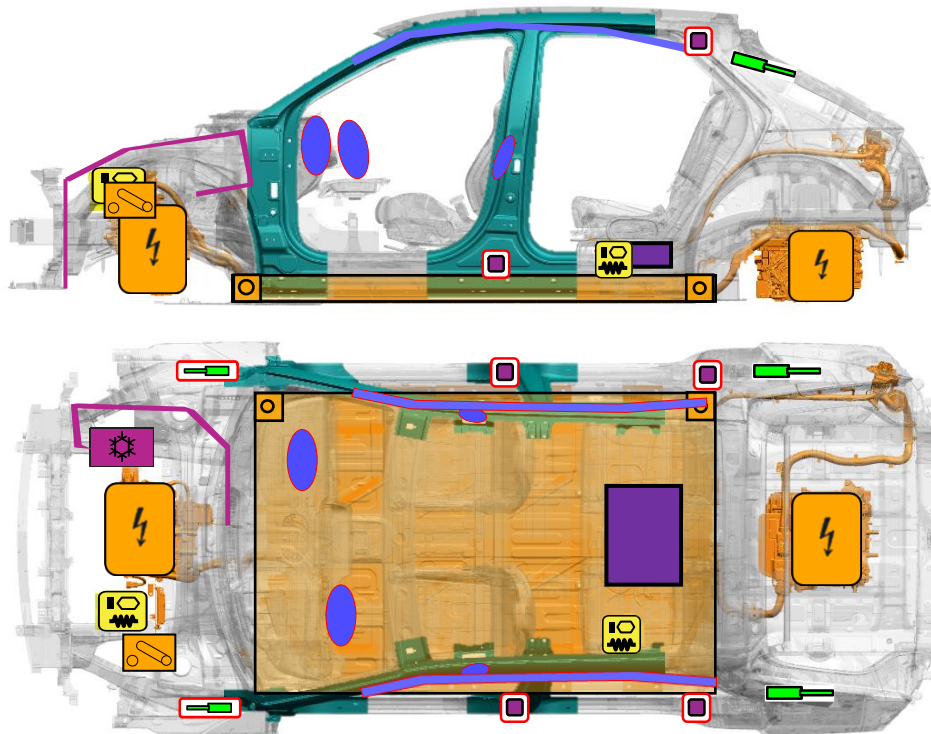

 Supplemental Restraint System Control Module (SRSCM)	 Airbag	 Airbag Gas Inflators
 High voltage cable	 12V Battery	 Air-conditioning line
 High voltage disconnect	 OBC (On – Board Charger)	 Ultra-High Strength Steel
 High Voltage Battery	 Air-conditioning component	 Seat belt pretensioner
 Motor Drive Unit	 Gas Strut	

Disabling Vehicle

1

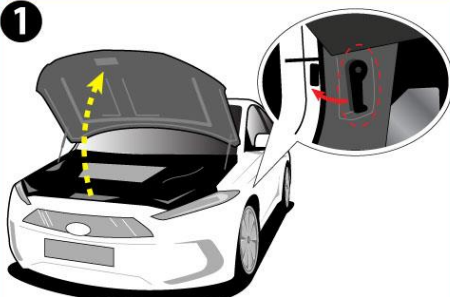


2



5m (16.4ft) or more
To Prevent Accidental Restart


3

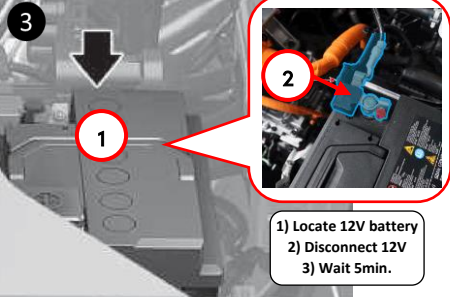

1) Locate 12V battery
2) Disconnect 12V
3) Wait 5min.

OR

1

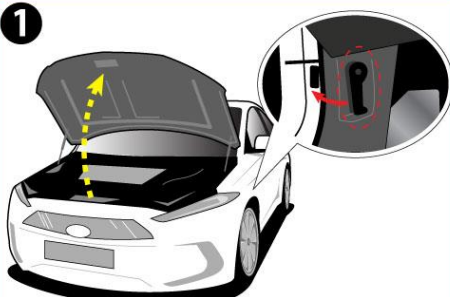


2



5m (16.4ft) or more
To Prevent Accidental Restart


3

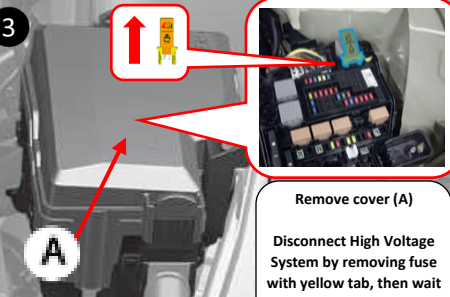

Remove cover (A)
Disconnect High Voltage System by removing fuse with yellow tab, then wait 5 minutes

Vehicle Towing Information

Tow the vehicle using a flat bed or using wheel dollies. Never tow the vehicle with the front or rear wheels on the ground

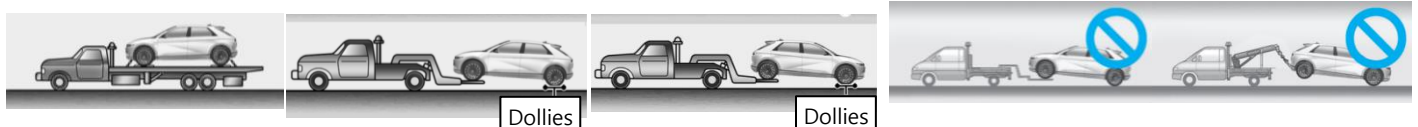

For further information, please refer to the Emergency Response Guide (ERG).

Applicable to IONIQ6 vehicles first sold in the United States.	ID. No.	Version No.	Page
	KMH-NEN	2023.11.06	2 of 2