

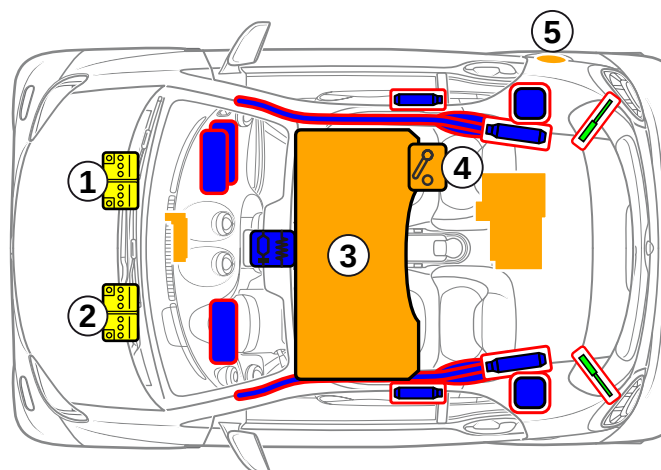
 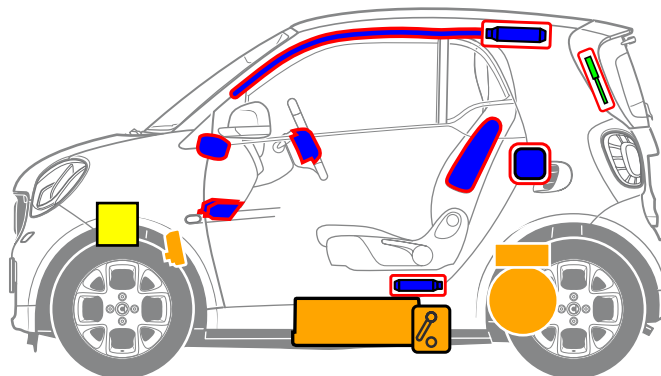


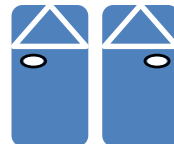


- 1 Battery (12 V), Left-hand drive
- 2 Battery (12 V), Right-hand drive
- 3 High-voltage battery
- 4 High-voltage disconnect device
- 5 HV charge socket

Note


Switch off the ignition before operating the high-voltage disconnect device.



 
Airbag




Gas generator

 


Seat belt tensioner

 


Restraint systems control unit

 

Gas-filled strut

 

12 V Battery

 

High-voltage battery




High-voltage components





High-voltage disconnect device

Vehicle identification

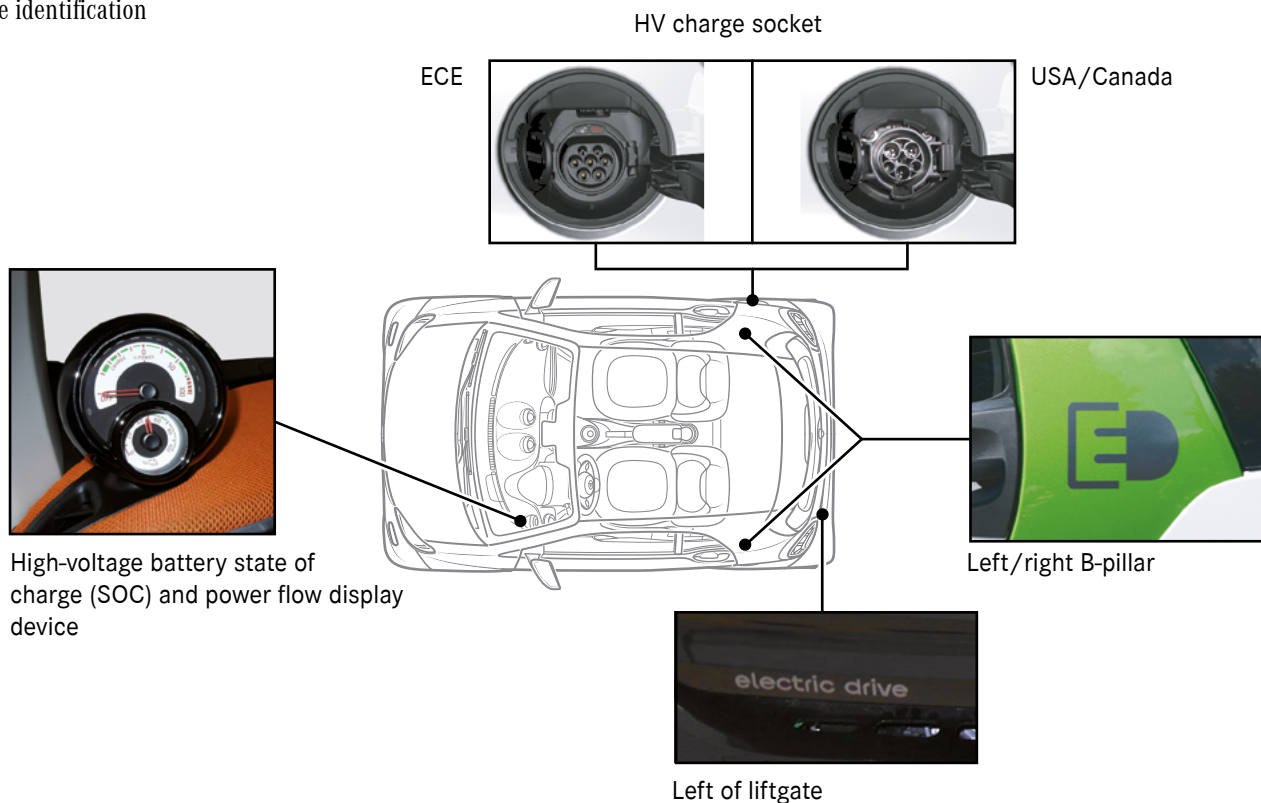

High-voltage disconnect device

The high-voltage disconnect device is located on the underside of the high-voltage battery on the right at the rear.

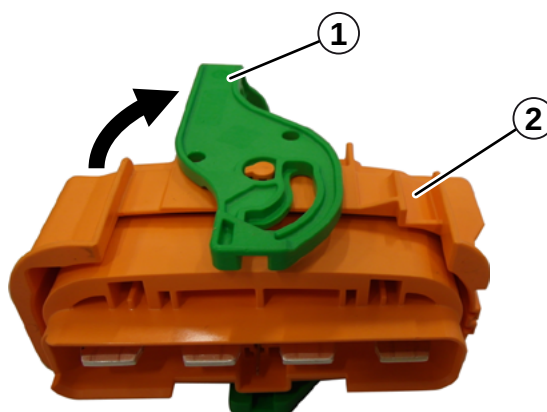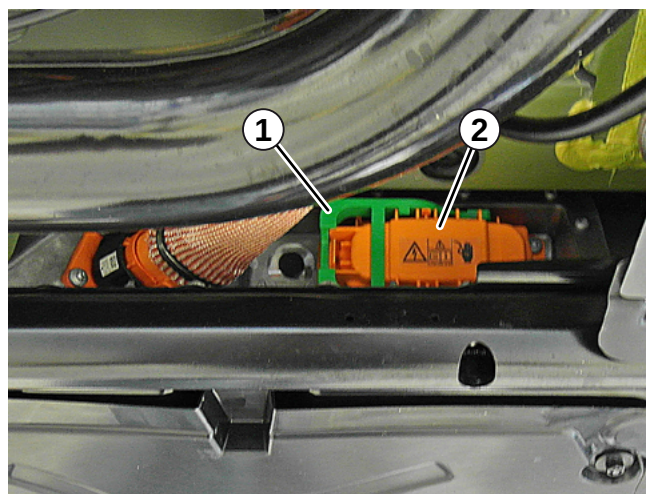

Open lock (1) on connector (2) / Unplug connector (2) from high-voltage battery