



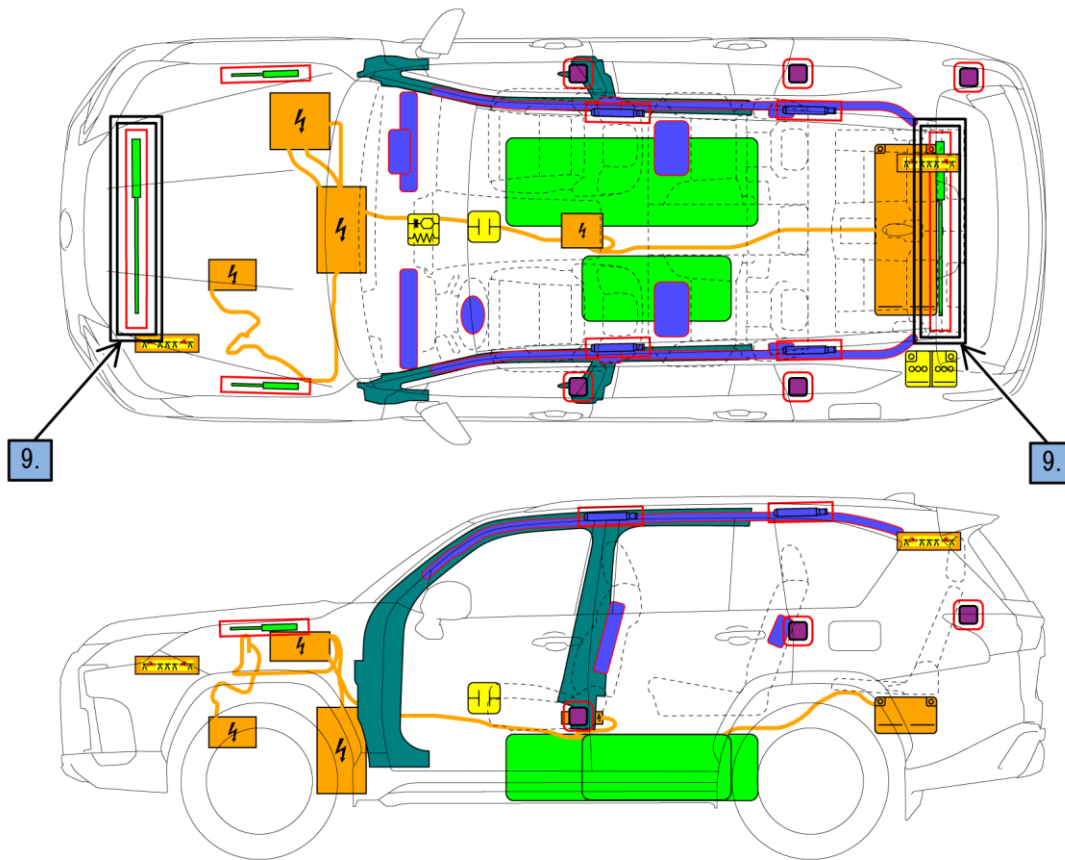

LEXUS LX700h

5 doors / 4, 5 or 7 seats / wagon

MY: 2025-present

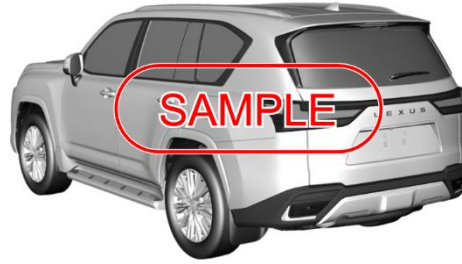


	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		
	Gas strut / Preloaded spring		High strength zone						
	Battery low voltage		Ultra-capacitor, low-voltage		Fuel tank				
	Battery pack, high-voltage		High voltage power cable		High voltage component		Cable cut		
ID No.		Version No.		Version date		Page			
LX700hHV310		01		11 / 2024		1 / 4			

1. Identification / Recognition



Lack of engine noise does not mean vehicle is off. Silent movement or instant restart capability exists until vehicle is fully shut down.

Location of vehicle badges

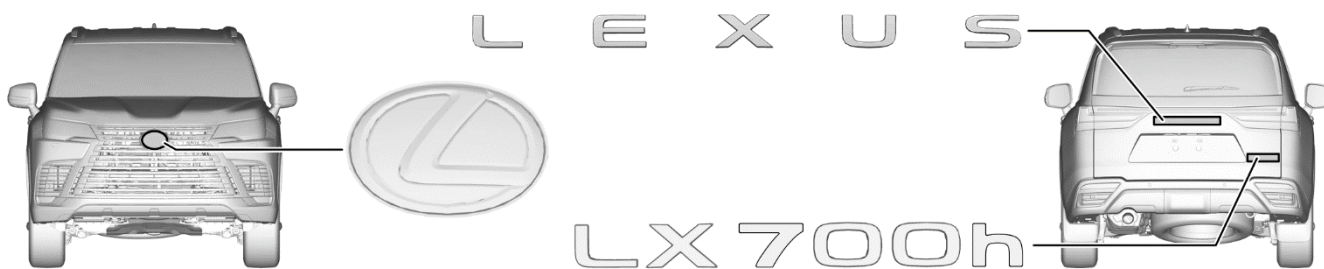


Energy source: Nickel-metal hydride battery




2. Immobilisation / Stabilisation / Lifting

Completely immobilize the vehicle

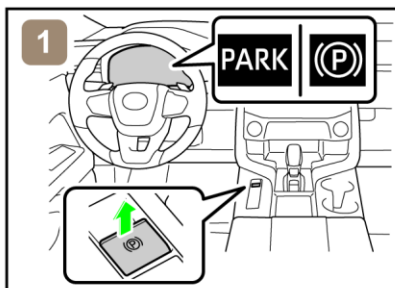


1) Chock the wheels and engage the parking brake.

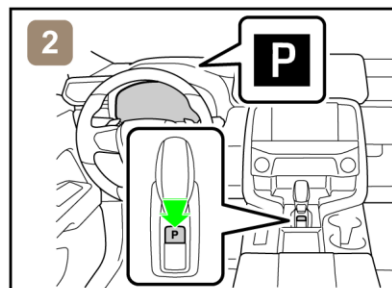

2) Press the P position switch.

Stabilisation-lifting point

Place cribbing such as wooden blocks at the four points under the front and rear pillars.

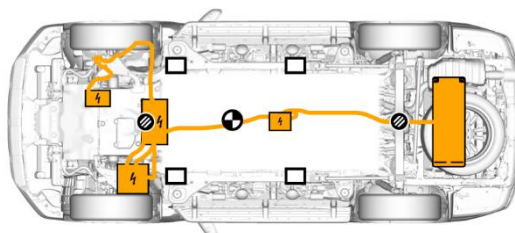

Extra Reinforced Lifting Points



Standard Jack Locations



Vehicle Center of Gravity



Do not place cribbing such as wooden blocks or rescue air lifting bags under the exhaust system, fuel system or high voltage power cables. Doing so may result in fuel leaks, fire or electric shock.

ID No.	Version No.	Version date	Page
LX700hHV310	01	11 / 2024	2 / 4

3. Disable direct hazards / Safety regulations


If any of the following systems are required to be operated, operate them BEFORE disconnecting the battery.

- Power door lock
- Power window
- Power seat
- Power tilt and telescopic steering
- Electric parking brake
- Power back door
- Electric shift lever
- Sliding roof


When the 12 V battery is disconnected, electrical components cannot be operated.

Perform procedure Main or Alternative to completely shut off the vehicle.

<Main Procedure>

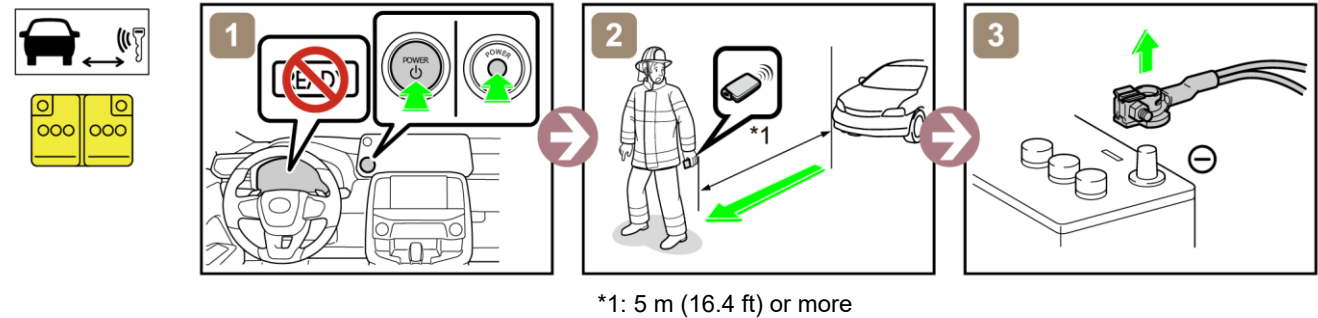


<Alternative Procedure>

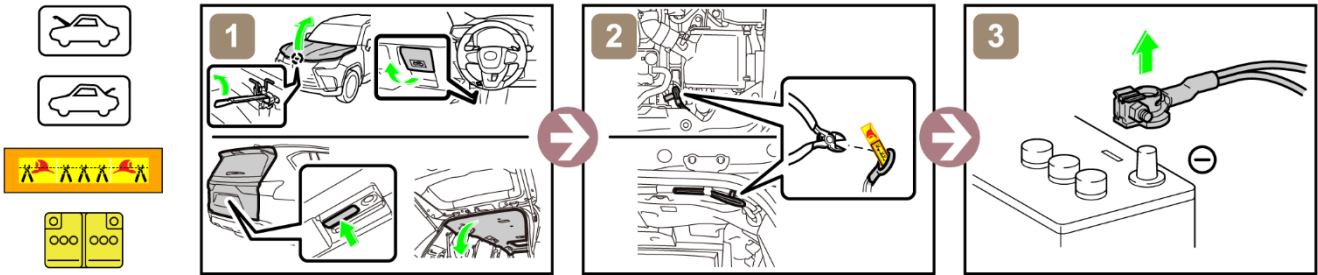


In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated.

Access to 12 V Battery

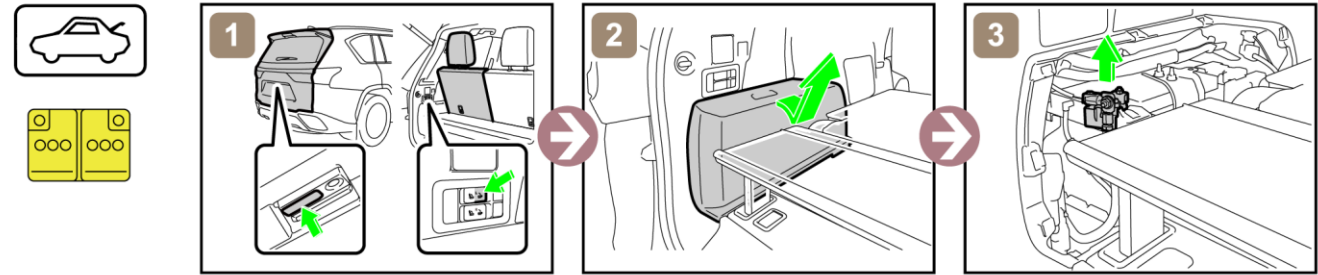

4. Access to the occupants

Window Glass

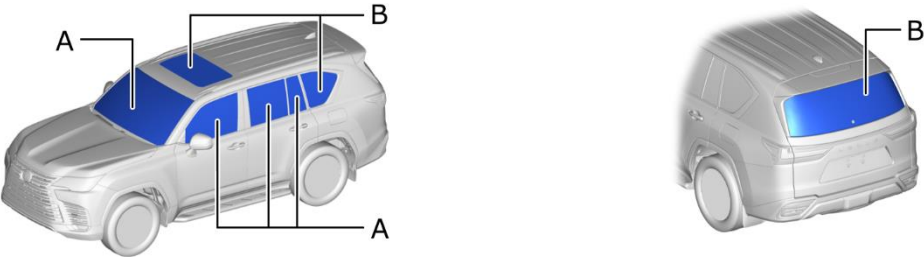

A	Laminated	B	Tempered
---	-----------	---	----------

5. Stored energy / Liquids / Gases / Solids



High Voltage Ni-MH Battery



12 V Battery



Gasoline Tank: 68 L, 98 L (68 L, 30 L)



- Always wear appropriate personal protective equipment (PPE) when dealing with any of these items.
- Never breach or remove the battery assembly cover under any circumstances, including fire. Doing so may result in serious injury or death from severe burns or electric shock.

6. In case of fire



USE COPIOUS AMOUNTS OF WATER

If it is difficult to apply copious amounts of water to the high voltage battery, it is recommended to allow the high voltage battery to burn itself out.



RE-IGNITION POSSIBLE !



Gas strut / Preloaded spring




As it is possible for a gas strut / preloaded spring to become a projectile, refer to the component layout drawing.

7. In case of submersion



Do not touch any of the high-voltage components or cables, including the service plug, while the vehicle is submerged. Doing so may result in electric shock.
Work on the vehicle only after the vehicle has been pulled out of the water.

8. Towing / Transportation / Storage

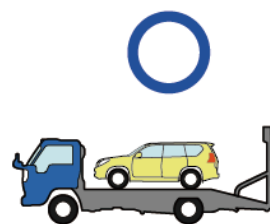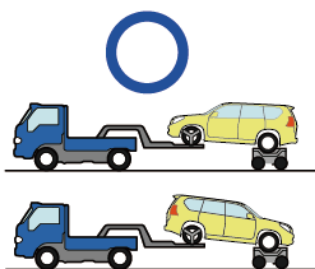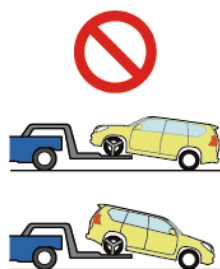

RE-IGNITION POSSIBLE !

Store the vehicle at a safe distance (15 m (49.2 ft) or more) from other vehicles.

9. Important additional information

Performance dampers (gas-filled dampers) are installed on the vehicle front frame (close to the bumper) and vehicle rear frame (close to the bumper).

For more details, please refer to "Emergency Response Guide."

<https://www.techinfo.toyota.com>

ID No.	Version No.	Version date	Page
LX700hHV310	01	11 / 2024	4 / 4