


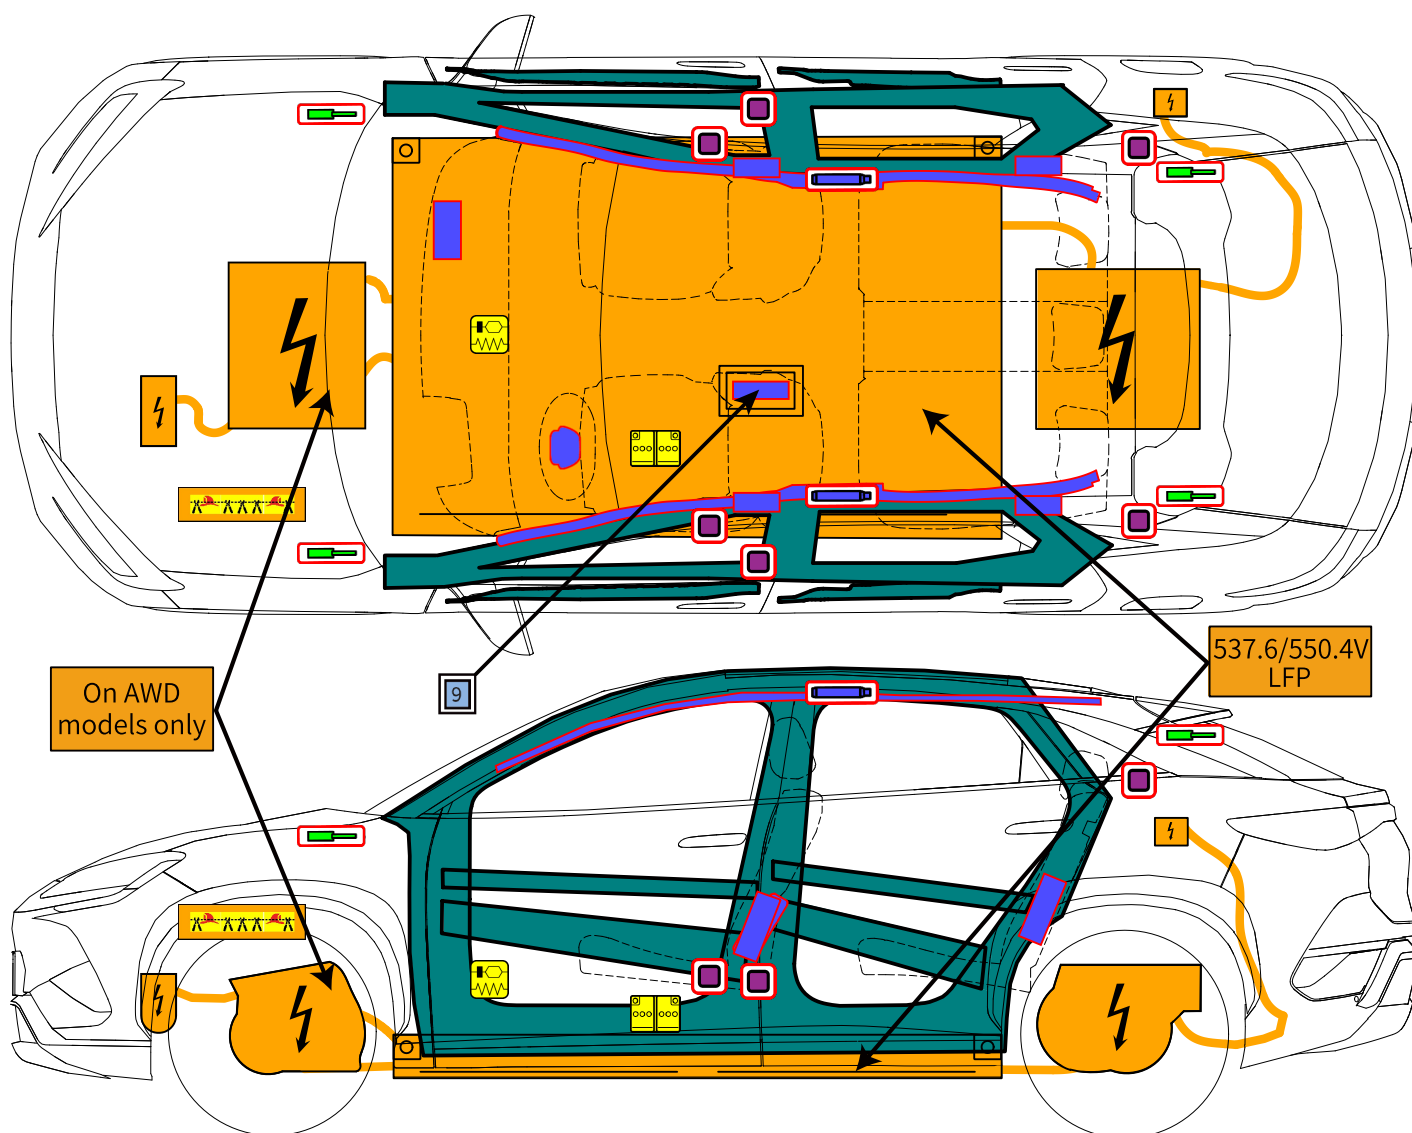

	Airbag		Battery low voltage		Battery pack, high-voltage		Cable cut
	Gas strut/ Preloaded spring		High strength zone		High voltage component		High voltage power cable
	Seat belt pretensioner		SRS control unit		Stored gas inflator		Zone requiring special attention



1. Identification / recognition




Lack of engine noise does not mean vehicle is off: Silent movement or instant restart capability exists until vehicle is fully shut down. Wear appropriate personal protective equipment (PPE).



("4.5s" and "AWD" on AWD models only)

2. Immobilisation / stabilisation / lifting


Immobilise the vehicle

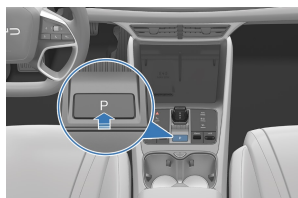

Shift into Park



Turn off the ignition

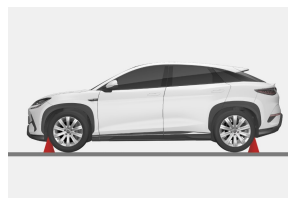

Chock wheels




Stabilisation-lifting points




■ Stabilisation-lifting points
■ High-voltage battery

3. Disable direct hazards / safety regulations

Main disabling method

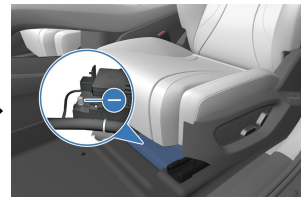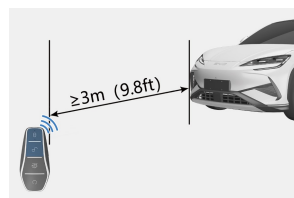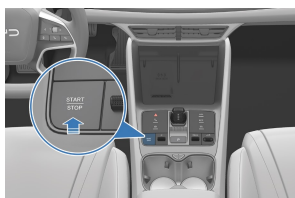

Alternative disabling method

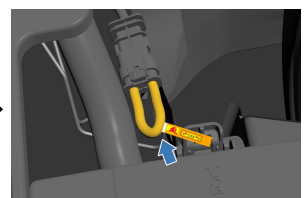


Do not touch, cut, or open high-voltage components and the high-voltage battery! Wear appropriate protective equipment!

In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated. The high-voltage system is de-energised approximately 60 seconds after deactivation.




4. Access to the occupants


High-strength zone

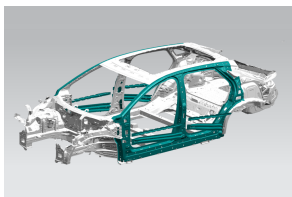


Seat adjustment

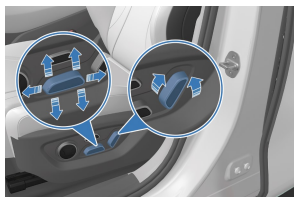


Steering column adjustment

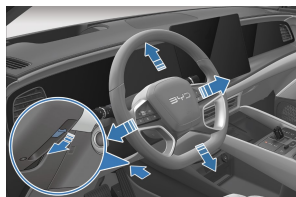


Inside door release

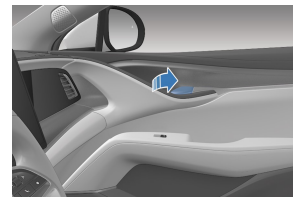

Outside door release

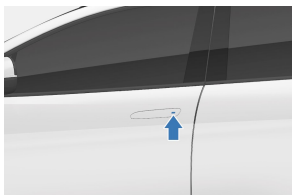


Ignition on

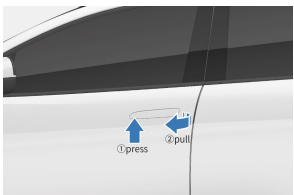

Ignition off



Glass types

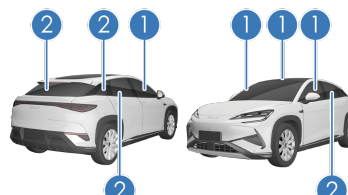

1 Laminated glass

2 Tempered glass

When the 12V battery is disconnected, electrical components cannot be operated.

5. Stored energy / liquids / gases / solids

		12V
		537.6/550.4V
		HFC-1234yf 1700/1900±10g



When there is coolant leakage, the battery pack may become unstable and there is risk of thermal runaway. The battery pack temperature must be checked with a thermal imaging camera.



6. In case of fire



Extinguish the fire using large amounts of water.



BATTERY RE-IGNITION!


7. In case of submersion

After removing the vehicle from the water, shut off the high-voltage system (see Chapter 3) and drain water out of the vehicle. Appropriate personal protective equipment must be worn during this procedure.




8. Towing / transportation / storage

Front hook location

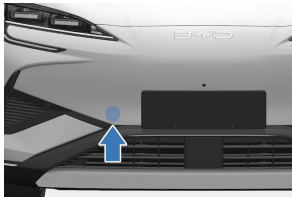

Rear hook location

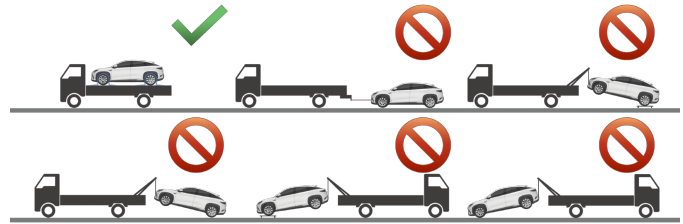

Store at a safe distance from other vehicles!



BATTERY RE-IGNITION!

9. Additional important information



Driver's seat has a far side airbag in addition to the side airbag.
Location of far side airbag is shown in the mark  on page 1.

10. Explanation of pictograms used

	Acute toxicity		Air-conditioning component
	Bonnet		Corrosives
	Electric vehicle		Explosive
	Flammable		General warning sign
	Hazardous to the human health		Remove smart key
	Use thermal Infrared camera		Use water to extinguish the fire
	Warning, Electricity		Warning; low temperature