


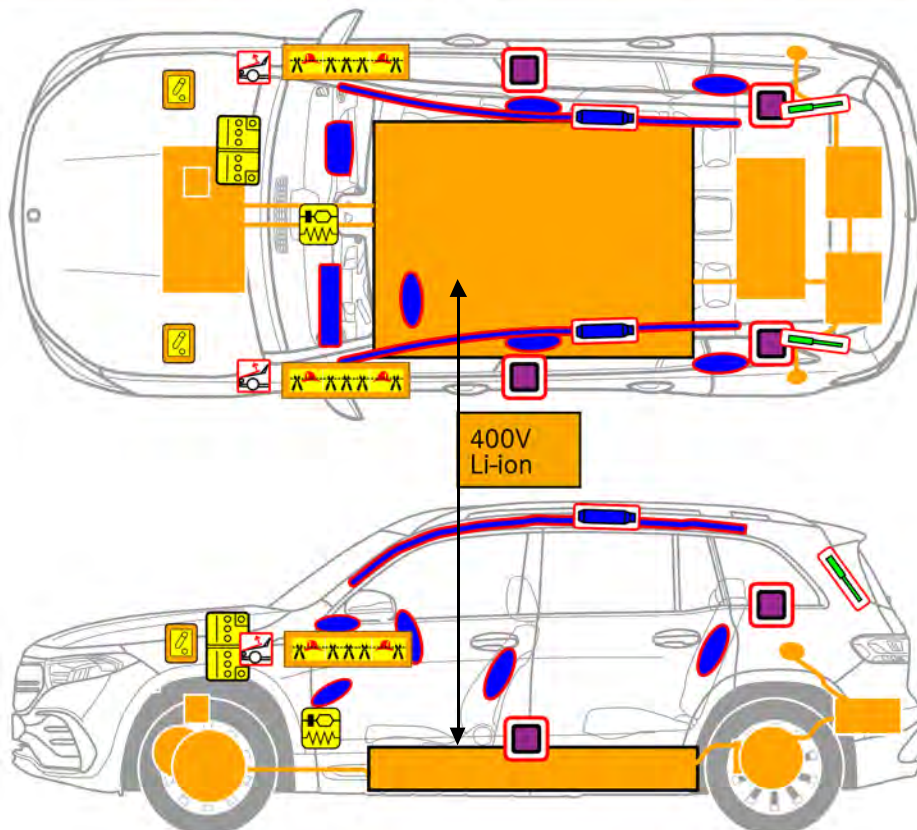

Legend



	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable / component		High voltage disconnect		Fuse box disabling high voltage system		Ultra capacitor, high voltage
	Alternative high-voltage disconnect device		High voltage disconnect (low voltage element)						

Note

For further information please refer to our “Guidelines for Car Rescue Crews”



1. Identification / recognition

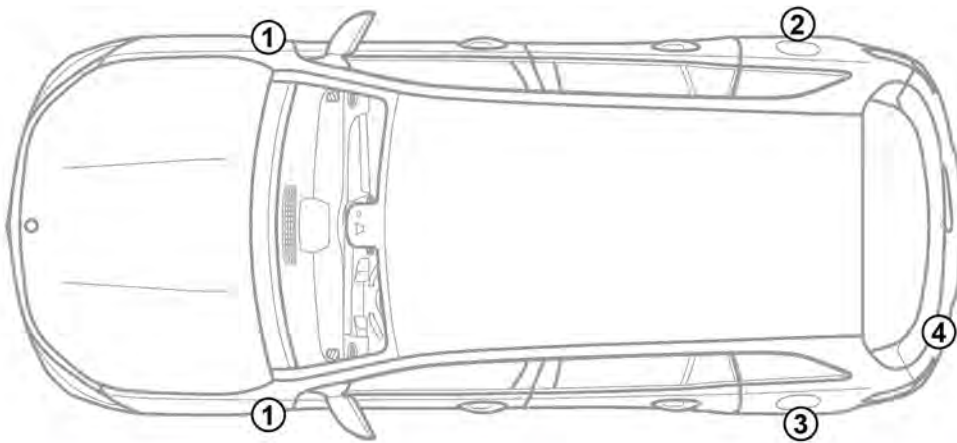


2. Immobilisation / stabilisation / lifting


Parking brake



Press switch **P** at the selector lever (1).
The parking brake is activated automatically.

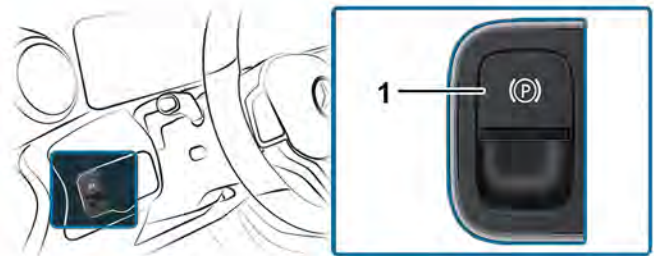

(1) Electric parking brake

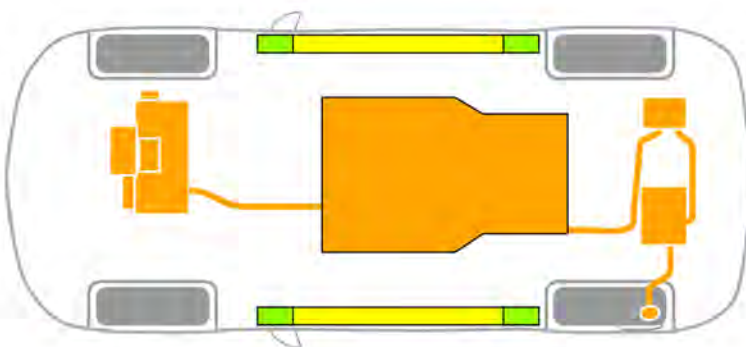

- Proper lifting points
- Suitable stabilization points on the side
- High voltage battery



ADDITIONAL DEFORMATION OF THE SKIRTS AND THE UNDERBODY DURING THE RESCUE (E.G. STABILISATION WITH HYDRAULIC EQUIPMENT) MUST BE AVOIDED.

3. Disable direct hazards / safety regulations

Switch off ignition:

1. Press the START-STOP button without applying the service brake.
2. Keep the electronic vehicle key at a distance of at least 5 m.



THE ABSENCE OF ENGINE NOISE DOES NOT MEAN THAT THE VEHICLE IS SWITCHED OFF.



A RESTART IS POSSIBLE UNTIL THE VEHICLE IS TAKEN OUT OF SERVICE.



3. Disable direct hazards / safety regulations

High-voltage disconnect



THE HIGH-VOLTAGE SYSTEM IS AUTOMATICALLY SWITCHED OFF IN THE EVENT OF ACCIDENTS INVOLVING THE DEPLOYMENT OF AIRBAGS AND SEATBELT PRETENSIONERS.



In all other cases the high voltage system must be deactivated as follows:

Option 1:

High-voltage disconnect device



The high-voltage disconnect device is located on the bottom of the a-pillar on the passenger side.




- (1) Operate release
- (2) Push the release downwards
- (3) Pull out switch

Option 2:

Alternative high-voltage disconnect device



The alternative high-voltage disconnect device is located behind the cover of the fusebox in the cockpit. It is marked with an information label.

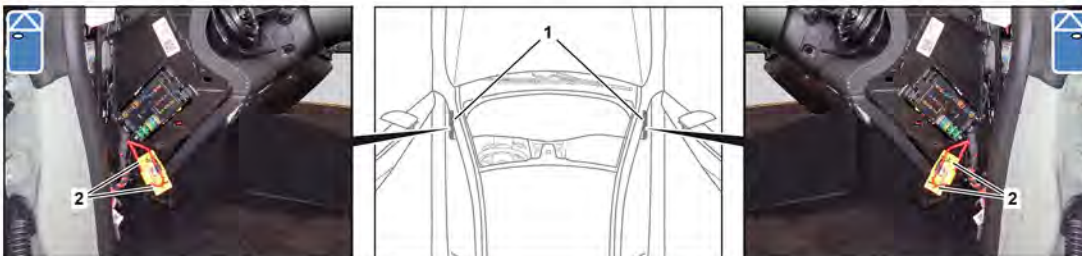

Remove cover (1) of fuse box. Cut line at marked location (2).



TO ENSURE THAT THERE IS NO REMAINING VOLTAGE IN THE HIGH VOLTAGE SYSTEM, WAIT ABOUT 20 SECONDS AFTER SWITCHING OFF.



THE PASSIVE SAFETY SYSTEMS SUCH AS AIRBAGS AND SEATBELT PRETENSIONERS CONTINUE TO BE SUPPLIED WITH POWER BY THE 12-VOLT VEHICLE ELECTRICAL SYSTEM.



Disconnect 12 V battery

1. Remove the cover of the 12-volt battery in the engine bay.
2. Loosen the negative cable of the 12-volt battery at the screw connection and secure it against unwanted contact.



THE PASSIVE SAFETY SYSTEMS (AIRBAGS AND SEATBELT PRETENSIONERS) ARE DEACTIVATED.




4. Access to the occupants


When rescuing the occupants, the areas of the bodywork consisting of high-strength steels and the components of the restraint systems (in particular pyrotechnic elements) shall be considered in accordance with the specifications on page 1.




Steering wheel adjustment

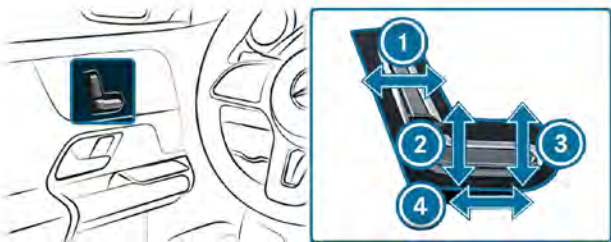

Seat adjustment (electric)

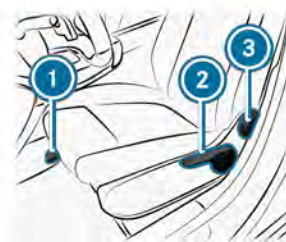

Seat adjustment (mechanical)

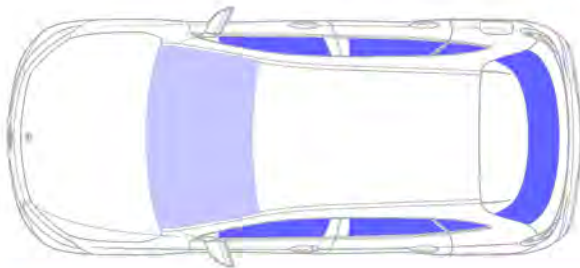

- Laminated safety glass
- Single-pane safety glass

5. Stored energy / liquids / gases / solids

Li-ion



ALL HIGH VOLTAGE LINES ARE COATED WITH ORANGE INSULATION.

6. In case of fire



Use large quantities of water (H₂O) to extinguish a vehicle fire.

Use large quantities of water (H₂O) to cool the Li-Io battery.



WARNING: REIGNITION OF THE BATTERY



IF COOLANT LEAKS FROM THE HIGH-VOLTAGE BATTERY, IT CAN BECOME UNSTABLE DUE TO THERMAL OVERLOAD. CHECK THE BATTERY TEMPERATURE WITH AN IR-THERMAL IMAGING CAMERA.





7. In case of submersion

There is no danger of voltage on the bodywork.

After recovery of the vehicle:

1. Drain the water from the interior.
2. Deactivate the high voltage system (see chapter 3).

8. Towing / transportation / storage

Transport the vehicle only with both axles on a tow truck or car transporter.



Keep at a safe distance from other vehicles.



WARNING: REIGNITION OF THE BATTERY



9. Important additional information

Further information can be found in the "Guidelines for car towing services".

10. Explanation of pictograms used



Electric vehicle



General danger sign



Warning of dangerous voltage



Distance digital vehicle key



Open hood



High voltage battery (lithium-ion)



Flammable



Hazardous to health



Corrosive (caustic)



Toxic



IR thermal imaging camera



Extinguish with water