





Volkswagen ID.3

5-door vehicle, as of 2023

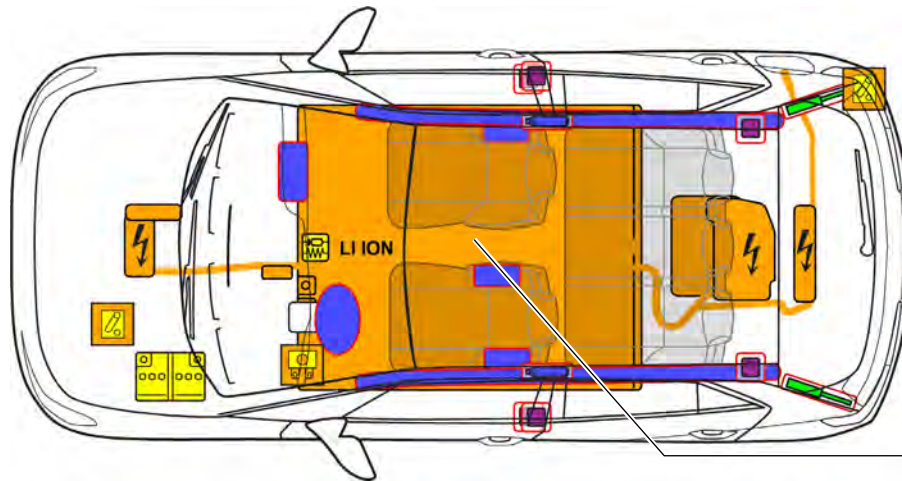

400 V
LI-ION

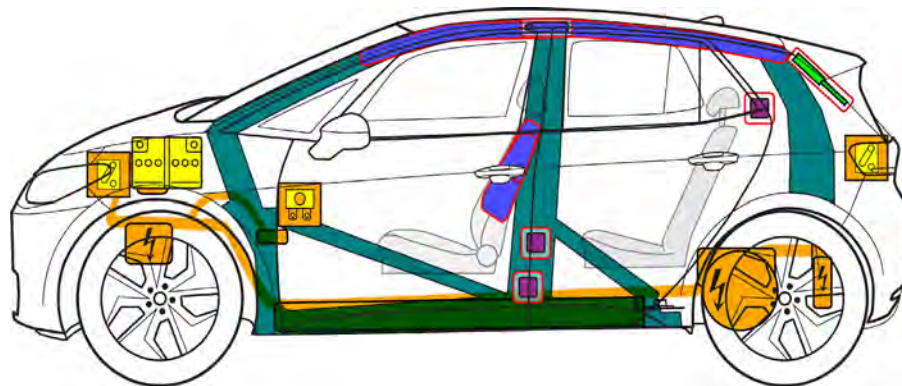

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Gas strut / Preloaded spring
	High strength zone		Battery low voltage		Battery pack, high-voltage		High voltage power cable		Low voltage device that disconnects high voltage
	Fuse box disabling high voltage		High voltage component						



Volkswagen ID.3

5-door vehicle, as of 2023

1. Identification / recognition



The electric drive motor is silent. The display in the dash panel insert (power display) provides feedback as to whether the electric drive is switched to "OFF", or "READY" for operation.

Lettering



Charging socket



Charging socket (EU)



2. Immobilisation / stabilisation / lifting

Immobilising the vehicle

Set the electric parking brake



Lifting points



Appropriate lifting points

High voltage battery

Switching off the ignition (power display "OFF")



Press the "START/STOP" button on the steering column



Instead of the ignition key, use of a key card or smartphone app is also possible.

3. Disable direct hazards / safety regulations


In the event of an accident in which the airbag is triggered, the high voltage system is automatically deactivated as soon as airbag triggering is detected. The high voltage system is de-energised approx. 20 seconds after deactivation.



Do not touch, cut or open damaged high voltage components, cables and high voltage batteries! Wear appropriate personal protective equipment!

In all other cases, the high voltage system can be deactivated as follows:

Option 1: from the motor compartment

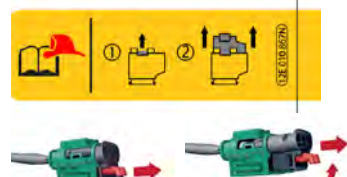



Volkswagen ID.3

5-door vehicle, as of 2023



Option 2: from the passenger compartment

Left-hand drive:



Right-hand drive:



Option 3: from the rear of the vehicle



1. Open the luggage compartment
2. Remove the cover under the tail light cluster
3. Cut the cable




Disconnecting the 12-volt vehicle battery



Open the bonnet
Disconnect the negative battery terminal

The 12-volt electrical system is used for functions such as unlocking and opening electrically operated doors and flaps, and for electric seat adjustment.


Disconnecting from the charging station (manual release of charging connector)

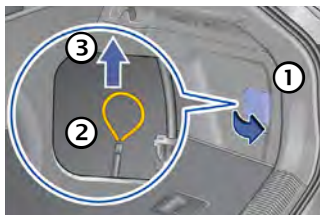

Open the boot lid

1. Open the perforated flap in the right-hand side trim
2. Locate the yellow loop for manual release
3. Pull the loop and disconnect the charging connector from the vehicle

4. Access to the occupants

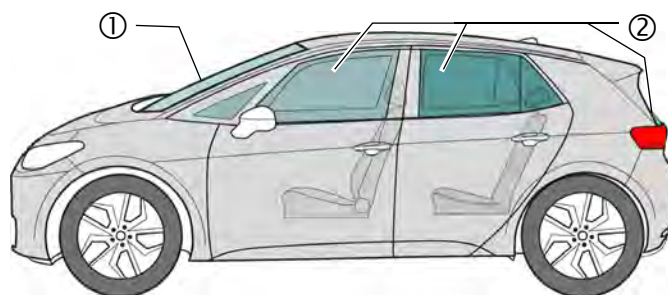

Glass types:

- ① Laminated glass
- ② Tempered glass

Electric seat adjustment



Mechanical seat adjustment



Mechanical steering column adjustment





Volkswagen ID.3

5-door vehicle, as of 2023

5. Stored energy / liquids / gases / solids



12 V



400 V
Lithium-ion



If coolant leaks from the battery cooling system, there is a risk of a thermal reaction in the high voltage battery.
Monitor the temperature of the high voltage battery!



6. In case of fire



Lithium-ion batteries can self-ignite or re-ignite after fire-fighting measures!
Wear appropriate personal protective equipment!




7. In case of submersion

After recovering the vehicle from the water, deactivate the high voltage system (see chapter 3) and drain the water. Wear appropriate personal protective equipment!

8. Towing / transportation / storage



Lithium-ion batteries can self-ignite or re-ignite after fire-fighting measures!
Wear appropriate personal protective equipment!



In the event that vehicles that have been in accidents have a damaged battery or the battery exhibits anomalies: disable the high voltage system (see chapter 3). Park the vehicle at a safe distance of at least 5 m from buildings and other vehicles (quarantine area).



Do not tow away a vehicle that was in an accident by the drive axles.

9. Important additional information

The ID.3 does not have a towing eye at the rear of the vehicle.

10. Explanation of pictograms used



Flammable



Corrosives



Hazardous to the human health



Environmental hazard



Electric Vehicle



Warning, Electricity



General warning sign



Use water to extinguish the fire



Dangerous voltage



Remove smart key



Use thermal Infra-red camera



Bonnet



Boot